


Trigger Spray Checklist

ANSI Z358.1 Guidelines

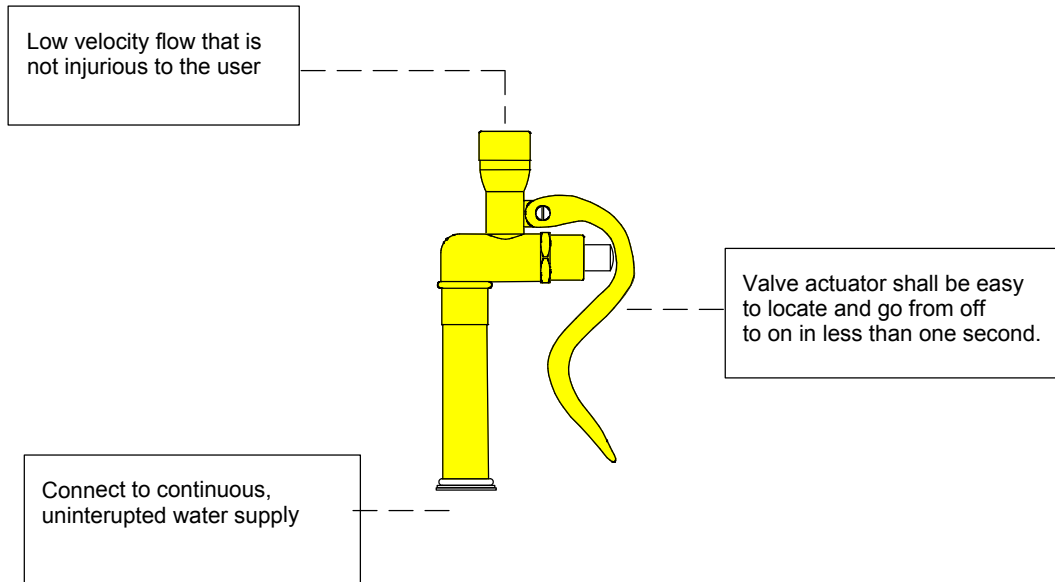

Water Temperature	The standard now calls for all water supply to trigger sprays to be tepid Standard guidelines define tepid as between 60 degrees F (15.6 c) and below 100 degrees F (37.8 c)
Maintenance/Inspection	The trigger spray should be activated at least once per week.
Location	No more than 10 metres from anyone working with hazardous materials
Training	Instruct all employees on the location and proper use of the trigger spray

Please note that a supplementary trigger spray may be used as well as, but not in place of, a compliant safety shower and eye wash