




NOVALAB
Systems Ltd.

Backflow Prevention

Part Number 19484109

Novalab back flow preventers are designed to eliminate the possibility of cross contamination from individual taps. They provide an anti-syphon break, thus preventing backflow in the event of pressure drop. They fit on the tap outlet and not under the bench.

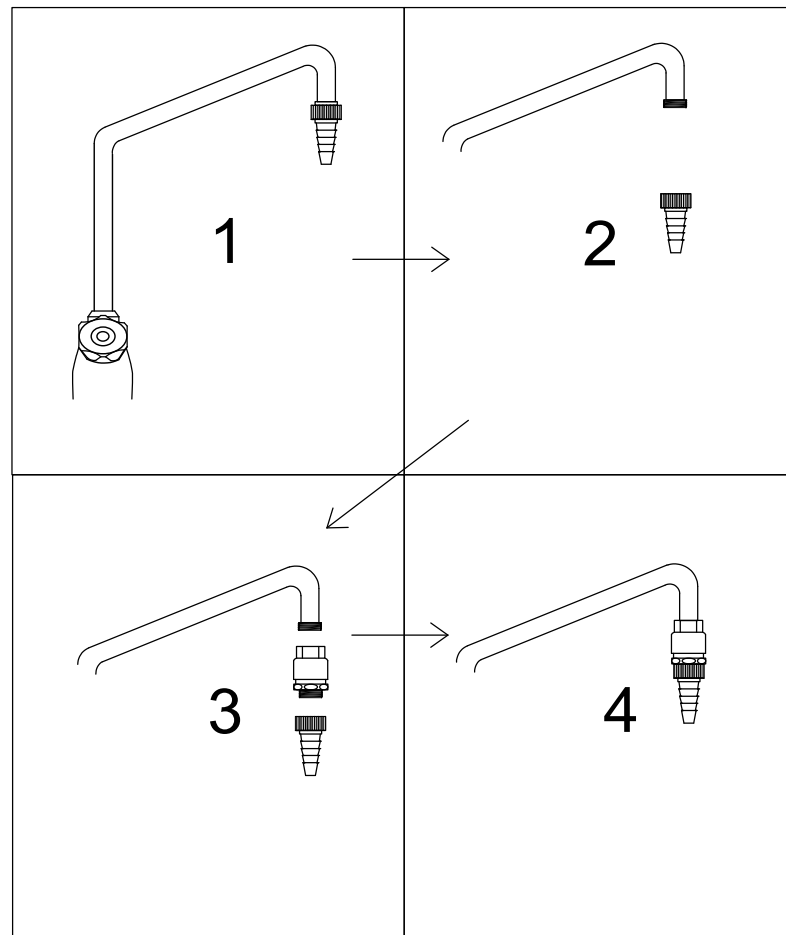

Please Note:

Ensure that all the taps to be fitted with back flow preventers are supplied with a removeable hose union.

In school situations it is advisable to use a suitable thread adhesive (i.e. Loctite) to ensure that the back flow preventer is not removed during subsequent operation.